4. Reversible Levers

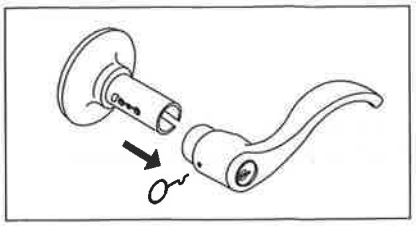

a. Please check the levers are unlocked (Entrance sets only).
Depressing lever catch with hand tool to release outside lever and pulling lever off.
Taking apart off the spacer and cylinder from outside lever.

b. Afterwards, taking apart off the spacers from inside lever with the above procedures.
Reversing the levers from outside to inside/inside to out side, putting the cylinder on the outside lever (Entrance sets only) and setting the spacer back.
Please do the same procedures for inside lever.

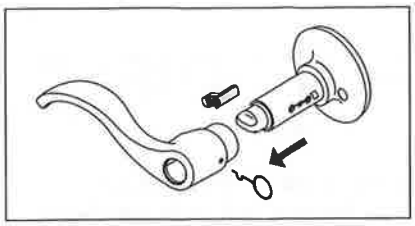

c. Pushing handles in until catch clicks. Make sure levers are retained by lever.

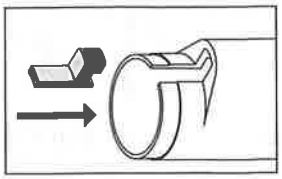

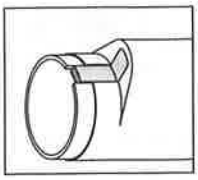

5. Install Outside Lever

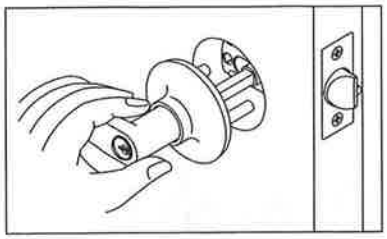

Insert spindle through latch.
Press flush against door.

Handle can be only installed when the timing of "emergency release" is set in the position shown below.

LEFT HAND DOOR

RIGHT HAND DOOR

6. Install Inside Lever

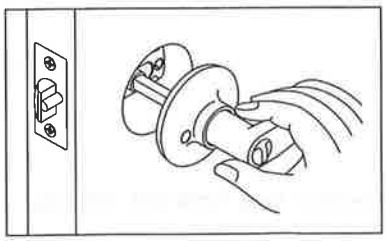

Install inside lever and
tighten screws until lock is firm.

7. Install Strike

A.

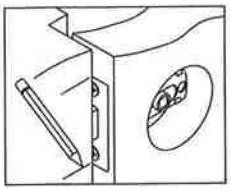

a. Close door to make horizontal centre line of strike.

B.

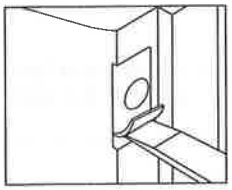

b. Measure one half of door thickness from door stop and mark vertical centre line of strike.
Drill 1" (25.4mm) hole 1/2" (13mm) deep at intersection of horizontal and vertical line of strike.
Match screw holes on strike with centre lines on jamb.
Mark outline and chisel 1/16" (1.6mm) deep for strike.

C.

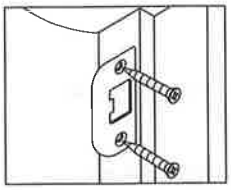

c. Install strike and tighten screws.

TEMPLATE

Fold on dotted line and fit on door edge

Fold on dotted line and fit on door edge

45 40 35
1-3/4" 1-9/16" 1-3/8"

Make 1" (25.4mm) hole at center of door edge.

FOR BACKSET 70mm (2-3/4")
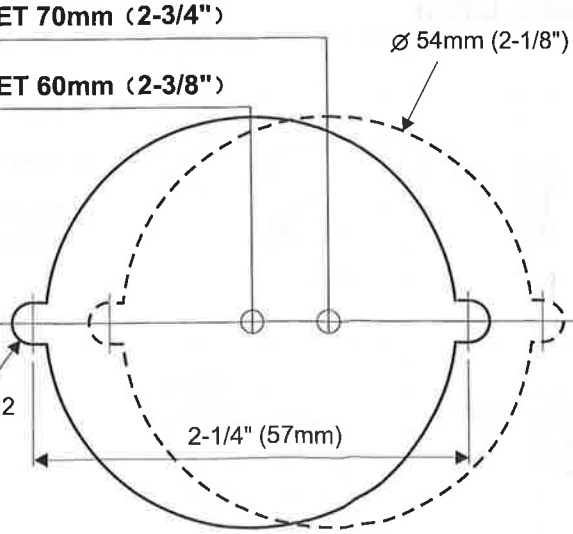
FOR BACKSET 60mm (2-3/8")